Duratec
AIRLINE SYSTEM

Submittal Data Sheet

Job or Customer: .....

Engineer: .....

Contractor: .....

Submitted by: ..... Date

Approved by: ..... Date

Order No: ..... Date

Specification: .....

introduction

Duratec pipe's unique composite structure incorporates a rigid yet flexible aluminum core, permanently bonded to layers of durable high density polyethylene (HDPE) plastic. HDPE on the inner and outer layers provides the best corrosion resistance against aggressive manufacturing environments while eliminating the inner scaling and corrosion associated with traditional metal compressed air pipes. Duratec fittings are supplied in tough nickel plated brass or stainless steel and utilize unique double o-ring seals to ensure long term joint integrity.

Duratec pipe meets the requirements of ASTM F1282 and CSA B137.9, Standards specifications for PE-AL-PE Composite Pressure Pipes. Duratec fittings meet the requirements of ASTM F1974, Standard specification for Metal Insert Fittings for Composite Pressure Pipes and has a national CRN of OA02020.2C. Duratec fittings also meet ASME codes B31.3, B31.9 and are certified to OSHA safety regulations. The Duratec pipe and fitting system is rated for long term continuous operating pressures of 200psi at 73°F and 160psi at 140°F. The minimum allowable operating temperature for Duratec pipe and fittings is -40°F.

Duratec may be used for a wide range of applications including compressed air supply, hand tool operation, valve actuation, robotic installation, bulk inert gas delivery systems, industrial oxygen and CO_2 delivery for carbonated beverage lines.

< STANDARDS >

ASTM F1282
ASTM F1974

CSA B137.9
CSA B51

CRN OA02020.2C

< CODES >

ASME B31.3
ASME B31.9

COMPANION PRODUCTS

Duraplus™ air-line

Duraplus is a pressurized piping system made from high-impact, ductile ABS, and specifically engineered for conveying compressed air and inert gases. Your large diameter compressed air option with sizes available up to 4".

pipe and fitting availability

DURATEC PIPE

Sizes: 3/8", 1/2", 3/4" and 1" diameters
Configurations: 100 ft. and 300 ft. coils

DURATEC NICKEL PLATED FITTINGS

Sizes: 3/8", 1/2", 3/4" and 1"
Configurations: Couplers, Tees, Caps, Elbows, Reducers, Male Thread Adapters, Female Thread Adapters, Copper Solder Adapters

DURATEC NICKEL PLATED VALVES

Sizes: 3/8", 1/2", 3/4" and 1"
Configurations: Duratec x Duratec straight ball valves

DURATEC 316 STAINLESS STEEL FITTINGS

Sizes: 3/8", 1/2", 3/4" and 1"
Configurations: Duratec x Male Thread Straight Adapters

www.ipexinc.com **866 473-9462**
Canadian Toll Free

IPEX

DAINDTIP060111

Installation Procedures

Installation:

The **Duratec** fitting system is a compression style fitting with a twist. It includes a split ring that tightens down onto the outside of the pipe when the nut is tightened over the joint

Tools Required:

Installation is simple and straight forward. To install **Duratec** Pipe and **Duratec** fittings, you will need the following, Plastic Pipe Cutter, **Duratec** beveling tool, adjustable end wrench(es), Suitable bending spring (optional).

Procedure:

Cutting and Joining **Duratec**

1. Cut the pipe square. A plastic pipe cutter should be used. Ensure that the stainless steel cutting blade being used is in good condition and sharp. **Rotate wrist while cutting**.
2. Remove the nut and the split ring from the fitting.

3. Push the nut and the split ring onto the pipe. Bevel the inside of the pipe by inserting the Duratec reaming tool and **rotating it 360º to engage the blades**. The fitting will then slip easily into the pipe without displacing the o-rings.
4. Push the fitting onto the pipe and fully against the shoulder of the fitting. If necessary, at this point the fitting can be rotated on the pipe to facilitate threading onto a valve, tee, etc.

   Turn the nut finger tight, plus one full turn with a wrench.

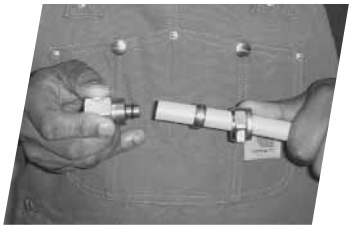

5. If it is necessary to remove the fitting, release the nut, remove the split ring and pull the fitting off the pipe. Before reassembling the joint, inspect the split ring and o-rings and replace them if necessary.

Bending Duratec Pipe:

Duratec is easy to bend and unlike plastic pipes, retains it shape when bent. External bending springs and standard tube benders are available. Pipe in dimensions 3/8, 1/2, and 3/4 inch are easily bent by hand. For 1 inch pipe or if the bending radius is near the recommended limit of five (5) times the diameter of the pipe, a bending tool should be used.

Air Testing Procedures

The purpose of a site pressure test is to establish that all joints have been correctly made. Air test in accordance with the authority having jurisdiction.

After making the first 20 or 30 joints, it is recommended that a test be applied to prove that the installation is satisfactory. If a leak is discovered, follow the appropriate procedure below. Testing of **Duratec** systems can take place immediately upon installation, since the joining procedure does not require a curing time.

The pressure testing procedure detailed below should be strictly followed.

1. Fully inspect the installed piping for evidence of mechanical abuse and suspect joints.
2. Split the system into convenient test sections, not exceeding 1,000 feet. The piping should be capped off with a **Duratec** cap at the end of the pipe section to be tested.
3. Test **Duratec** to a maximum of 1.25 times the design operating pressure up to a maximum of 1.0 times the IPEX maximum rated pressure. Duration of testing shall comply with local regulatory measures or alternatively with the engineer designing and inspecting the system.
4. If there is a significant drop in pressure, or extended times are required to achieve the desired pressure, joint leakage has occurred. In this event inspect for joint leaks.
5. If joints are leaking, tighten the nut 1/8 to 1/4 turn.
6. Repeat Step 3 after repairing any leaking joints.

Notes

Products manufactured by IPEX Inc. and distributed in the United States by IPEX USA LLC.

Duratec® and Duraplus™ are trademarks of IPEX Inc.